


User Manual

GP-100R | GP-101R | GP-200R | GP-300R | GP-1000T

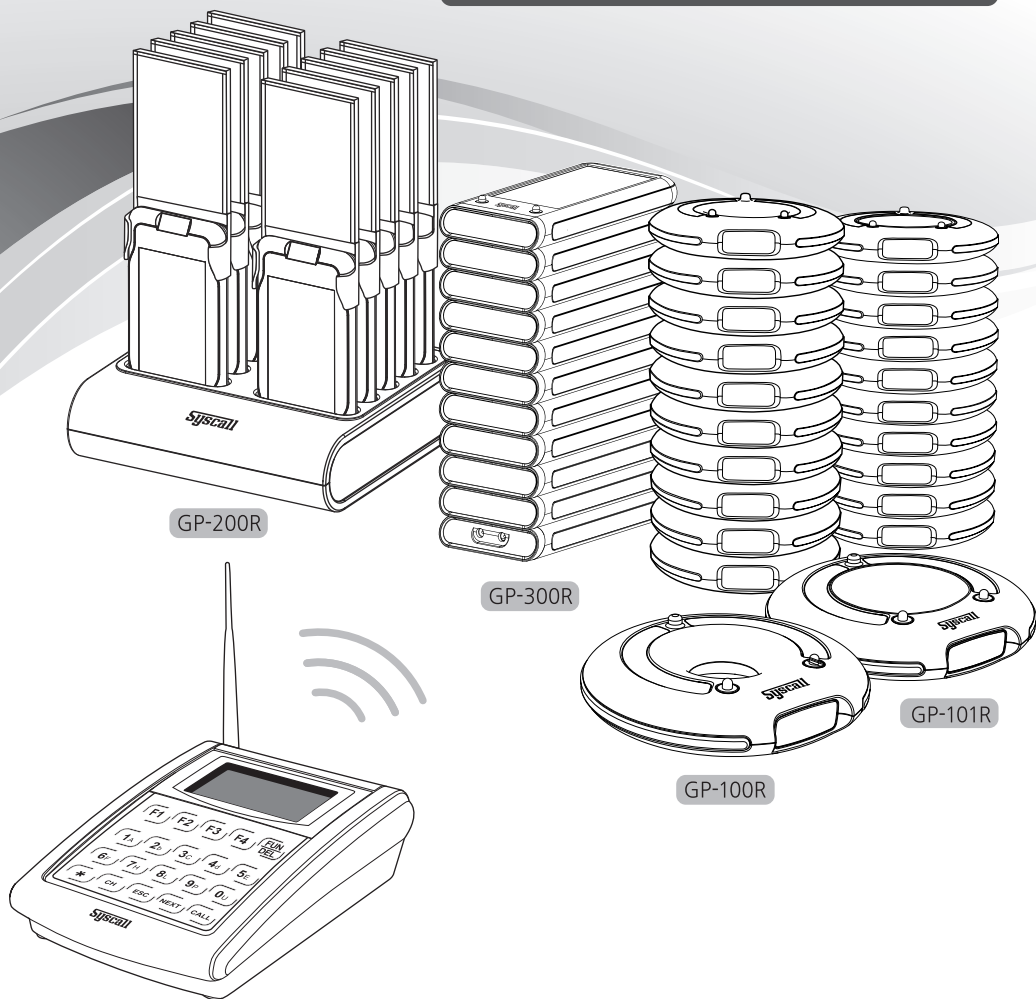

Please read the user manual before using the products.

Syscall

Table of Contents

1. Composition & Specifications	2
2. Installation	2
3. Keypad Description	3
4. Functions & Initial Setting	3
4-1. General Functions	3
4-1-1. How to Enter General Functions Picture	3
4-1-2. Vibration Setting Picture	3
4-1-3. Buzzer Setting Picture	4
4-2. Extended Functions	4
4-2-1. How to Enter Extended Functions Picture	4
4-2-2. Setting Group Number & Channel Number Picture	4
5. Display Description & Guest Pager Number Setting	5
5-1. Screen Display Description	5
5-2. Random Number Setting	5
5-2-1. Input a Random Number Picture	5
★ 5-3. Fixed Number Setting	6
★ 5-3-1. Input the Fixed Number Picture	6
6. How to Call the Guest Pagers	7
6-1. Make a Call	7
6-1-1. How to Call a Random Number Picture	7
★ 6-1-2. How to Call the Fixed Number Picture	7
6-2. Cancel the Call	8
7. Initialization	8

1. Composition & Specifications


< Transmitter GP-1000T SET >



Transmitter
(GP-1000T)



Antenna

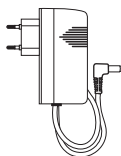


Adapter
(DC 12V 1A)



Manual

< Guest pager SET >

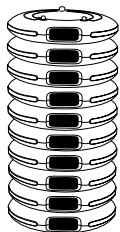


Guest pager



Charger



Jump Cable
(Optional purchase)

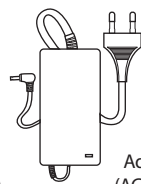

Adapter
(AC 8V 3A)

	GP-100R, GP-101R	GP-200R	GP-300R
Frequency	FM / 433MHz	FM / 433MHz	FM / 433MHz
Power	AC 8V 3A	AC 8V 3A	AC 8V 3A
Battery	Lithium-polymer battery	Lithium-polymer battery	Lithium-polymer battery
Dimension	Ø 95 × H17mm	W53 × L105 × H11 mm	W58 × L115 × H15 mm
Weight	86g	35g	72.5g
Color	Red, Green, Black	Black	White&Blue

Transmitter (GP-1000T)	
Frequency	FM / 433MHz
Antena/Distance	Dipole Antenna / 300m
Power	DC 12V / 1A
Size	W130 × L170 × H32mm
Weight	410g
Display	Graphic LCD

2. Installation

Guest pager SET

GP-1000T SET


- 1) Stack up guest pagers on the charger. / Insert GP-200R into the charger.
- 2) Plug-in the adapter and insert the connector.
- 3) Make sure all pagers are fully charged and powered on.
- 4) Twist the antenna onto the connector located on the rear of the transmitter.
- 5) Plug-in the adapter and insert the connector into the ports next to the antenna.
- 6) Setting group & channel numbers to start using the system. (refer to 4-2., page4)

* Charging time : About 2.5 hours

* Standby time : About 9 hours

* Capacity of adapter : Recharging up to 20 guest pagers at once.

3. Keypad Description

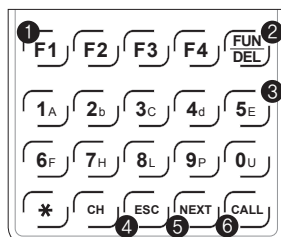

- ① F keys : F1~F4 keys correspond to the 1~4 in the display LCD
- ② FUN/DEL : Function / Delete
- ③ Number keys : Press it longer convert to alphabet
- ④ ESC : Cancel / Exit
- ⑤ NEXT
- ⑥ CALL : Call / Enter

4. Functions & Initial Setting


4-1. General Functions

Menu	Initial	Range	Display	Explanation
RC (Range Check)	0 (off)	0-off, 1-on	rcon, rcof	The function is used to alert staff and guests if the guest pager is out of range area.
Bt (Backlight Time)	10s	0 ~ 99s (0:Duration)	-	Operating time of backlight
Fn (Fix Number)	0	0 ~ 9999 (0:Use a random number)	0~9999	Setting fixed number of guest pagers
Ct (Call Time)	30s	0 ~ 99s (0:Duration)	ct00~ct99	Ringing time of guest pagers
Mt (Motor)	1 (on)	0-off, 1-on	Hton, Htof	Vibration on/off
Bu (Buzzer)	1 (on)	0-off, 1-on	buon, buof	Buzzer on/off
LE (LED)	1 (on)	0-off, 1-on	LEon, LEof	LED on/off


4-1-1. How to Enter General Functions



4-1-2. Vibration Setting

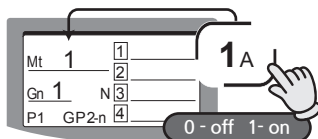

4-1-3. Buzzer Setting

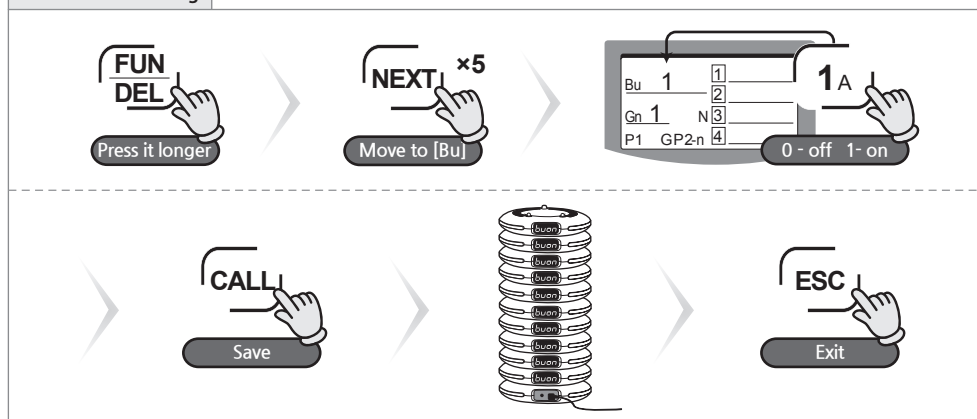


4-2. Extended Functions (* This menu is protected by password.)

Menu	Initial	Range	Display	Explanation
Gn (Group number)	1	1 ~ 99	gn01 ~ gn99	Identification number to avoid the interference with the same products of surrounding users
Pn (Channel number)	1	1 ~ 99	Pn01 ~ Pn99	

※ For GP-200R, Gn/Pn indicates as g/p.


4-2-1. How to Enter Extended Functions

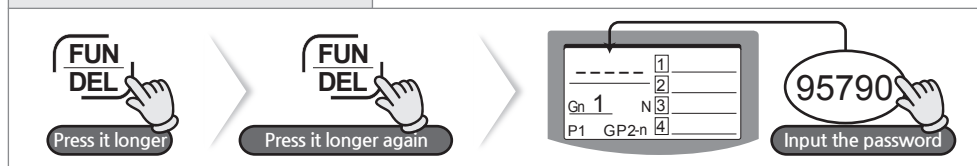

4-2-2. Setting Group Number & Channel Number

※ Group & Channel numbers can be set only once at first.
Initialization is required when needs to change.

ex) Gn : 44, Pn : 33

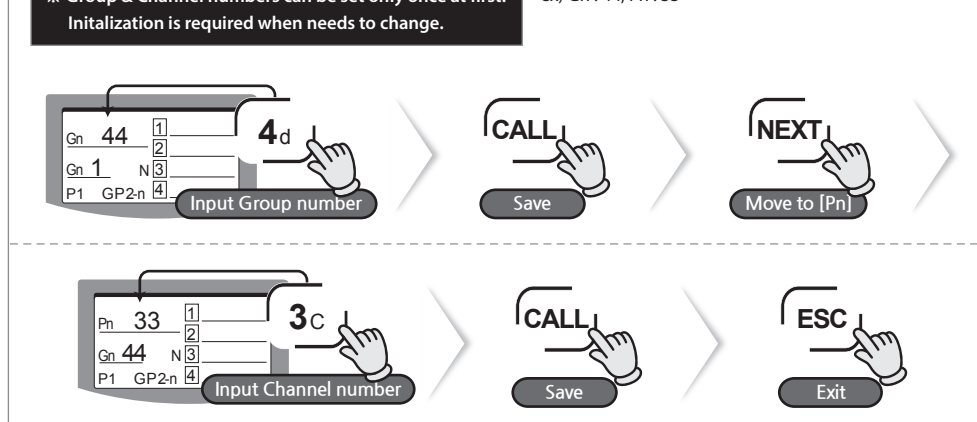

5. Display Description & Guest Pager Number Setting

5-1. Screen Display Description

Guest pager display	GP-200R display	Explanation
CALL	CAL	When it receives a call
Lo (Low battery)	Lo	Low battery, recharging is required
rFEr	rFE	Faulty RF, No reception – Please contact us
P	P	% of remaining battery
U_	U_	Version information (ex. U-32)
「」, number	「」, number	When RF off, 「」 and number will be flashed. Stack up the pager on the charger
outr	out	Alerting when the guest pager is in out of range area. It will be stopped when it is within the range.

5-2. Random Number Setting

Random Number Setting is able to allocate any numbers to each guest pager whenever it is used.

Advantage : using any numbers depending on the situation. (range: 1~9999)




Caution! The transmitter's group & channel numbers and guest pagers' group & channel numbers should be identical. Please stack up all guest pagers on the charger before setting.

Enter to General Functions



5-2-1. Input a Random Number ▶ [7P] 6-1-1. How to Call a Random Number

Caution! Although there is a number '0' or other number by Fn,
Please follow the instruction below from the beginning.

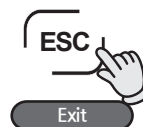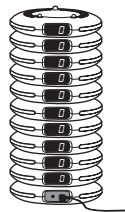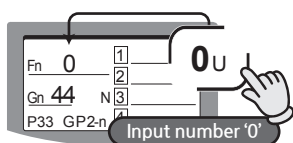

※ The random number function is not usable when GP-1000T is in interactive transmission mode.
Please set the GP-1000T as simplex mode if you wish to use the random number function
- Refer to GP-1000T additional features.

★ 5-3. Fixed Number Setting

Fixed Number Setting is able to allocate guest pager's numbers beforehand. (ex. 1~10 or 11~20)

Advantage : Simply call the preset number.

It does not need to allocate the number every time when it uses.


Caution! The transmitter's group & channel numbers and guest pagers' group & channel numbers should be identical. Please stack up all guest pagers on the charger before setting.

Enter to General Functions




★ 5-3-1. Input the Fixed Number ▶ [7P] 6-1-2. How to Call the Fixed Number

ex) Preset the guest pager number 1 to 10

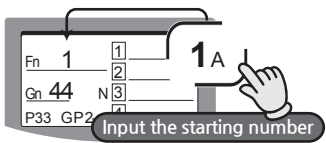

Repeat this procedure until the last one

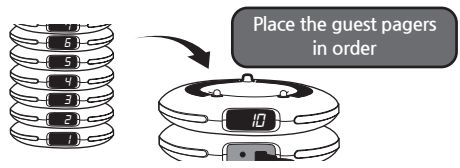


6. How to Call the Guest Pagers


6-1. Make a Call

Caution! All guest pagers should be stack up when input a number.
Maximum 4 digits (range: 1~9999, 3 digits for GP-200R)

6-1-1. How to Call a Random Number

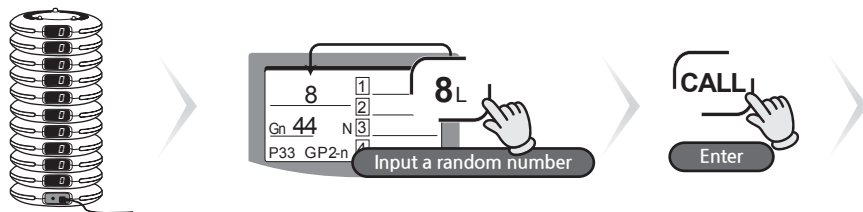

★ 6-1-2. How to Call the Fixed Number

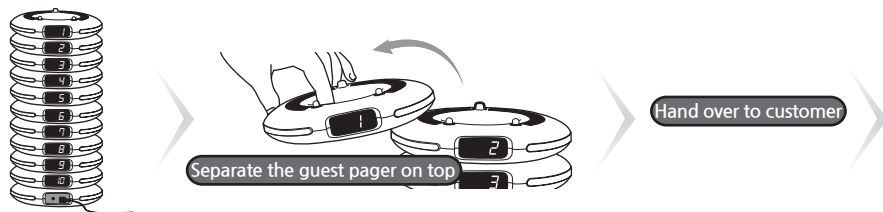


6-2. Cancel the Call


How 1

Return the guest pager

Stack it up on the pager

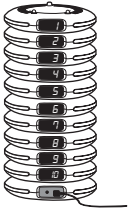

How 2

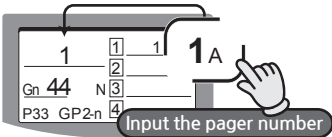

Input the pager number




Cancel

7. Initialization

Group & Channel numbers **can be set only once** at first.
Initialization is required when needs to set them again.
Initialization can be completed when **group & channel numbers are identical**.



Press it longer
convert to alphabet

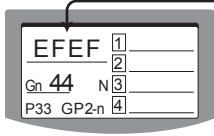


Input code



Press FUN/DEL key



Initialization completed

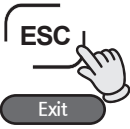

Exit



syscall



Syscall

■ **SYSCALL France - www.syscallglobal.fr**
0033 (0)1 84 17 61 81 - contact@syscall.fr
242 boulevard de Stalingrad 94500 Champigny sur Marne,
France

Manufacturer

■ **NTTWORKS CO., LTD**
413-9 NTTWORKS Bldg, Galhyun-Dong, Eunpyong-Gu
Seoul, Korea